

sureshotgps

Be your own hero

HERO150X

User Manual
Version 1.0



Back 178

Front 158

Center 168

GOLF

Getting to know your **HERO150X**



Please read the following information in this booklet to ensure you gain the full benefit of all the features in your Sureshotgps™ Hero 150x

Table of Contents

	Page
1. Getting Started	5
Check the contents of your box	5
Fully charge the Sureshotgps™ battery	5
Registering on line	5
2. How to Download a Course Map	6
3. Understanding GPS	7
What is GPS and how does it work?	7
Satellites and reception	7
Can I use my GPS inside the home or office?	7
Best position for accuracy of my Sureshotgps™	7
4. Navigating around your Sureshotgps™ Hero 150x	8
Start Menu	8
GPS Signal	8
Front, center and back of each green	9
Auto course searching	9
5. Setting Menu	10
Metres or Yards	10
Round Time	10
Backlight Setting	11
Set Time	11
Model Information	12
Course Information	12
6. Measuring Shot Distance	13

HERO 150X

Please read the following information in this booklet to ensure you gain the full benefit of all the features in your Sureshotgps™ Hero 150x

Table of Contents

	Page
7. Editing, Front, Centre and Rear of Green	14
8. Technical and Product Support	15
7. Frequently Asked Questions	15
8. Limited Warranty	16
9. Declaration of Conformity	18

sureshotgps

Be your own hero

HERO150X



GOLF

1. Getting Started

The contents of your Sureshotgps™ Hero 150x Box should include:

- Sureshotgps™ Hero 150x unit with belt clip
- Quick start guide
- USB Cable

Fully Charge your Sureshotgps™ Hero 150x Lithium Ion battery.

- Before you start using your Sureshotgps™ Hero 150x you must fully charge the internal lithium ion battery for approximately 6 hours or overnight. A charging icon will appear on the screen when charging begins. The Hero 150x will charge fastest when it is turned off.
- You cannot over charge the battery so you can leave it charging in between uses.
- You can charge the Hero 150x using the supplied USB cable and connecting it to a computer.

Registering on line

To begin using your Sureshotgps™ Hero 150x, the product must first be registered online. Registering will activate your warranty.

- You will need to have an internet connection
- You need to go to www.sureshotgps.com
- Click on “register” on the right hand side menu bar and follow the prompts

HERO 150X

2. *How to Download New Course Maps*

Your Sureshotgps™ Hero 150x comes preloaded with Australia and New Zealand courses, if you wish to delete, update or download more courses please follow the instructions below.

- Connect to the internet
- Connect your Sureshotgps™ Hero 150x to your computer via the USB cable provided
- Go to www.sureshotgps.com
- Click on my Sureshotgps™ > Hero 150x

Please note: If this is the first time you are downloading new courses to the unit you must install the **Sureanalysis** software (once you have selected your GPS model, click **download software** and follow the prompts to install).

You must also install the software if you change computers.

SureAnalysis works only in conjunction with our website www.sureshotgps.com.

Click on “My SureshotGPS”.

From the menu, you can interact with your Sureshotgps™ Hero 150x.

To interact with the Sureshotgps™ Hero 150x, the unit needs to be connected via the USB port and turned on.

HERO 150X

3. Understanding GPS

What is GPS and how does it work?

Your Sureshotgps™ Hero 150x uses the Global Positioning System [GPS] to work out how far you are from the front, centre and rear of each green. The system relies on the Sureshotgps™ 150x receiving signals from orbiting GPS satellites.

How long does it take to gain reception from the satellites?

Always turn your Sureshotgps™ 150x on for at least five minutes before you wish to use it.

Can I use my Sureshotgps™ 150x inside the home or office?

Your Sureshotgps™ 150x will not generally gain reception inside. For best accuracy, your Sureshotgps™ should have an unimpeded view of the sky.

When playing, what position is best for accuracy of my Sureshotgps™ Hero 150x?

You should clip your Sureshotgps™ 150x to a position on your buggy or bag that maximises clear view of the sky. A range of accessories are available such as cart mount kits and pull cart kits on www.sureshotgps.com.

GPS accuracy is affected by a number of factors, including satellite positions, noise in the radio signal, atmospheric conditions, and natural barriers to the signal. Noise can create an error between 5 to 10 meters and results from static or interference from something near the receiver or something on the same frequency.

The most accurate determination of position occurs when the satellite and receiver have a clear view of each other and no other objects interfere.

How do I Check for GPS Signal?

Before checking, ensure you have maximum clear sky above and the Sureshotgps™ Hero 150x has been on for at least five minutes.

At the top of the main screen on the right there is a satellite icon.

When it is solid [not flashing] you have good satellite strength.

HERO 150X

4. Navigating around your Sureshotgps™ Hero 150x

For best GPS reception always ensure you are in an open area



Start Menu


Press Power on/Enter key for 3 seconds until the power is on.

Three options are listed on the start menu: <Play>, <Settings> and <Power off>.

You can move the mark by pressing <Up arrow> and <Down arrow> to the selected option and then press enter.

Satellite Position

You can enter the main menu after choosing <Play> on the start menu.

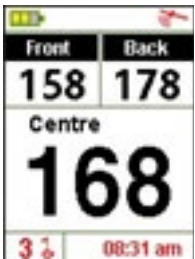

You will see a satellite icon on the top right corner that flashes when you start your Sureshotgps™ Hero 150x for the first time.

This means it is searching for satellites. The icon will stop flashing once it has locked in and you can then use all of the functions of the device.

Main Menu

This display will be used most frequently when you use your Sureshotgps™ Hero 150x.

You can choose <Play> on the start menu and press Enter; alternatively, you can press Enter for 3 seconds to return to the start menu on any menu; then you can choose <Play> and press Enter.

HERO 150X

4. Navigating around your Sureshotgps™ Hero 150x

For best GPS reception always ensure you are in an open area

The main menu displays the distance between you and the front, centre and rear of each green.

You can press the Up and Down Key to move to the next hole or any other hole.



If current hole number is <1>, you can press the Up key to switch to the second hole and you will see the hole number in the bottom left corner change into <2>

The menu will display the distance from you and the front, centre and rear of the second hole.

This menu also displays battery status, satellite reception status, current hole number and real time.

Automatic Course Searching

The Sureshotgps™ Hero 150x can provide an automatic course searching service; when you arrive at a course, stay at the start menu until the satellite icon has stopped flashing.



The Sureshotgps™ Hero 150x will ask if you want to select the course it has chosen. You can choose <Yes> to use the course information or choose <Play Previous> to maintain original course setting or choose <Select Course> to select the course you need in the course list.

Please note you must have previously up loaded courses onto your Sureshotgps™ Hero 150x before applying the auto course searching function.

**please note, the courses will only display once you are at the Course.*

HERO 150X

5. Settings Menu



Before using your Sureshotgps™ Hero 150x please go to settings.

After you move the mark to item\ <Settings> with Down arrow and press Enter on the start menu, you will see the following items:

Distance measure



Metres or Yards

Distance measure is preset to metres.

If you want to change it into yards, you can choose <Metre/Yard> on the setting menu and press Enter, the unit will be changed into yards if you press Enter again, it will switch back to metres.

Round Time

The Sureshotgps™ Hero 150x provides a simple timer to enable you to view the time taken to play your round of golf.

You can return the timer to zero at any time by selecting <Reset Timer> and pressing Enter.

You can view the time taken during your game by going to the Course Card page.

This page can be located anytime by pressing the page key.

HERO 150X

5. Settings Menu

Backlight Setting

The Sureshotgps™ Hero 150x is preset to full time backlight.

The full time backlight provides for best viewing and the high battery capacity ensures it can be left on if you are playing 18 holes.

If you do not touch any key for 30 minutes, the Sureshotgps™ Hero 150x screen will darken automatically.

You can alter the duration for backlight by simply using the Up and Down key to increase or reduce the duration. Press Enter after you choose <Backlight Setting> Press Enter when you have made your selection.



Set Time

Your Sureshotgps™ Hero 150x will set present time automatically according to relevant data of GPS satellites.

You can adjust for daylight saving with the Up and Down Key after choosing <Time zone Set> and pressing Enter on the setting menu.

The setting menu will reappear after you adjust the time and press Enter



HERO 150X

5. Settings Menu



Model Information

You can check model, software/ hardware version and product serial number (S/N) of your Sureshotgps™ Hero 150x by pressing Enter after choosing <Model Info> on the setting menu

You can go back to the setting menu by pressing Enter again.

Course Card

The Course card provides information relevant to each hole.

You can go to the course card menu anytime by pressing Page Key on the main menu.



Information displayed by the score card menu is as below:

- Course Name
- Hole Number (will change according to the hole number selected on the main menu)
- Par

HERO 150X

6. *Measuring Shot Distance*

The Shot distance function enables you to measure your drive and iron distance easily and precisely.

Press the Enter Key to display the Shot Distance Screen.

Now press Page Key for 3 seconds to reset the distance to 0 at the position where you will hit the ball.



When you go to where you have hit the ball, the menu will display the distance between your current position and where the ball was instantly.

Then press Enter and this distance will be saved.

To return to the start menu, press the Page Key.

You can also use this function to measure between any two points on the course.

HERO 150X

7. *Editing the front, center and back of the green*

The Sureshotgps™ Hero 150x allows you to edit the mapping of the front, centre and rear of any mapped hole.

For example, if you are going to correct the distance of the green center of the third hole on a course today, press Up and Down key to choose the third hole on the start menu.

When you stand at the green center you wish to be the new center for that hole press Page for 3 seconds and you will see the figures flashing.



Press Up and Down key to change the flashing figures to the green center and press Enter again, then the Sureshotgps™ Hero 150x will ask you whether to correct the green center.

Press <OK> and the distance will be reset as <0> which means the distance between you and the green center is 0.

You can also use the Up and Down keys to choose the front and back of the green to make similar corrections.

Remember you must be standing on the new position to make the correction for front, center and back of any green.

HERO 150X

8. Technical and product support

Live chat is available on www.sureshotgps.com from Monday to Friday, 9AM to 5PM (AESDT)

Our friendly Sureshotgps support team is available on 1300 644 523 (call not available from mobile phones) or (03) 9873 4433, from Monday to Friday, 9AM to 1PM (AESDT)

Email your queries to support@sureshotgps.com

9. Frequently Asked Questions

My Sureshotgps™ Hero 150x won't turn on, what can I do?

Please try charging the unit using a different USB port on your computer or try a new USB lead.

Try resetting the unit – Simultaneously hold Up, Down and Page buttons for 5 seconds and release.

If you still have issues turning the unit on or to get a new USB lead please contact SureshotGPS support.

My Sureshotgps™ Hero 150x won't connect to the computer.

Please make sure that you have the correct version of the software installed for your device.

Still having issues? Please try using a different USB lead or connect the unit to a different USB port and try again.

To get a new USB lead under warranty please contact SureshotGPS support.

Who can help me with technical questions & support?

Our friendly team is available on chat or email at support@sureshotgps.com
It is recommended you contact us directly rather than returning to the place purchase for the fastest response to your enquiry.

HERO 150X

10. Limited Warranty

Sureshotgps™ Pty Ltd (“SS”) warrants that product delivered in this package will be free from material defects for one (1) year following the date of purchase from SS or its authorised reseller. For the purpose of this warranty, “material defect” means any defect in a SS product that can be reproduced by SS and is a substantial nonconformity from the published specifications for such product. SS shall not be responsible for any loss or damage whatsoever resulting from any defect in or associated with its products which occur or are notified by the purchaser to SS or its authorised repairer more than one year from said date of purchase.

This Limited Warranty does not apply to normal wear and tear or if any component of the Sureshotgps hardware is opened or repaired by an unauthorised person or company, and does cover repair or replacement of any Sureshotgps hardware damaged by: MISUSE, MOISTURE OR LIQUIDS, EXPOSURE TO HEAT, ACCIDENT, ABUSE OR NEGLECT. Dropping your Sureshotgps can permanently damage the GPS antenna and receiver and is not covered under the terms of the Limited Warranty.

This Limited Warranty does not cover physical damage to the surface of the Sureshotgps, including cracks or scratches on the LCD screen.

Neither the manufacturer or distributor or reseller shall be responsible for data that may be damaged or lost at any time. As the SS may gain information either through USB or wireless technology, we cannot guarantee the successful transmission of information.

Limited Warranty does not extend to any defects which have been caused or contributed by neglect, misuse or accident, nor in respect of product which has been altered by other than authorised SS personnel or its authorised repairers. The determination as to whether the terms of this warranty are to apply to returned products is within the sole discretion of SS or its authorised repairer. Provided any returned product is determined to be covered by this warranty, SS or its authorised repairers shall at SS’s sole discretion, repair or replace, free of charge, any products or parts thereof.

HERO 150X

10. Limited Warranty

In no event whatsoever shall SS be liable for any incidental, special or consequential loss or damage resulting from the purchase and/or use of its products howsoever caused and howsoever claimed. Any liability on SS under this warranty in respect of any repair and /or replacement and/or any action involving any of its products shall be limited to and not exceed the purchase price of the product in question. The terms of this warranty are subject to relevant provisions of any Federal, State or Municipal law. Any dispute or action in relation to this warranty or the construction of it shall be subject to and conducted in accordance with the laws of Victoria, Australia.

Before returning any product, contact the SS Customer Support Group and obtain an RA number. Visit the Sureshotgps™ website www.sureshotgps.com for support contact details. If the Customer Support Group verifies that the product is likely to be defective they will issue an RA number to place on the outer package in which the product will be shipped. SS cannot accept any product without an RA number on the package. Warranty returns must also be accompanied by a copy of the dated proof of purchase. Deliver the product along with the RA number to SS. If you ship the product you must assume the risk of damage or loss in transit.

You must use the original container (or the equivalent) and pay the shipping charge. SS may replace or repair the product with either a new or reconditioned product and the returned product becomes SS's property.

SS warrants the repaired or replaced product to be free from material defects for a period of the greater of (i) ninety (90) days from the return shipping date; or (ii) the period of time remaining on the original one (1) year warranty.

If there is any inconsistency between this Limited Warranty and any Warranty included in the packaging of the Sureshotgps™ Hero 150x, the provisions of this Limited Warranty shall apply.

HERO 150X

11. Declaration of Conformity

We, Sureshotgps™ Pty. Ltd declare under our sole responsibility that the Sureshotgps™ Hero 150x conforms to all world standards of compliance.



Sureshotgps™ Pty. Ltd. operates a policy of continuous development. Sureshotgps™ Pty. Ltd. reserves the right to make changes and improvements to the Sureshotgps™ Hero 150x and any other of its products without prior notice.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document.

Sureshotgps™ Pty. Ltd reserves the right to revise or withdraw it at anytime without prior notice.

Software Licensing

This product contains embedded software. You have a non-exclusive, non-transferable right to use the software only as embedded in the hardware and may not copy, disassemble or attempt to reverse engineer the software or use it on any other hardware.

The software includes software supplied to SS by third parties (“Suppliers”) which is provided without warranty by such Suppliers. The software is owned by SS or its Suppliers and is protected by copyright laws and laws protecting trade secrets, intellectual property and confidential information.

HERO 150X