

sureshotgps
GENIUS W1
know the distance

User Manual
Version 1.0



Table of Contents

Page

1.0 Introduction

What's in the box

2.0 Getting to know your Sureshotgps™ Genius W1

3.0 Specifications

4.0 Before use

Charging

Registering

5.0 Power On

6.0 Time mode

7.0 Time mode settings

8.0 Golf mode

Navigating Golf mode

Play Golf

Automatic Course Recognition

Green view

Hazards mode

Hazars button

Shot distance

Scorecard

9.0 Odometer menu

Table of Contents

Page

10.0 Settings menu

Alarm
Time format
Set time
Daylight
Date
Unit
Backlight
Sound

11.0 Sureanalysis software

System requirements

12.0 Frequently Asked Questions (FAQ)

13.0 Limited Warranty

14. Declaration of Conformity

15. Software licensing

sureshotgps
GENIUS W1
know the distance



1.0 Introduction

Thank you for purchasing the Sureshotgps™ Genius W1. This watch has been designed to be used on the golf course to maximize your game.

What's in the box

Sureshotgps™ Genius W1
Rechargeable lithium ion battery (installed)
USB Charging/ Docking Clip
Quickstart Guide

2.0 Getting to know your Sureshotgps™ Genius W1



GENIUS W1

2.0 Getting to know your Sureshotgps™ Genius W1

Power on/off	Press and hold for 3 seconds to turn the device on and off.
OK/Menu	Hold button down to go back to menus. Touch button lightly to make menu selections.
Up	Press to scroll through menus, holes, and settings.
Down	Press to scroll through menus, holes, and settings.

3.0 Specifications

Preloaded courses	Over 1300 courses in Australia and New Zealand
Battery	Rechargeable lithium ion
Battery life	Golf mode: up to 6.5hrs Time mode: up to 40 days
Display size	1.26" transfective screen 144 x 168 pixels
Waterproof rating	IPX7
USB interface	Supported

4.0 Before use

Charging

It is important that the battery is charged before use.

Plug charger into USB port on computer and place the watch into the charging clip as shown below



Registering

It is highly recommended that you register your Sureshotgps™ Genius W1 for warranty purposes. Follow the easy instructions at www.sureshotgps.com/register

Updates to software will only be possible if you have registered your Sureshotgps™ Genius W1

5.0 Power On

Press and hold Power/Light button for 3 seconds until the screen lights up.

The device will display Sureshotgps™ logo first then take you to Time mode.

GENIUS W1

6.0 Time mode



GENIUS W1

7.0 Time mode settings

- Press Up button to change 3rd row to display 2nd Time Zone
- Press Down button to display Sunrise time
- Press Down button to display Sunset time
- Press Down button to display Second
- Press Down button to display Stopwatch
- To start the Stopwatch, press OK/Menu button
- To pause the Stopwatch, press OK/Menu button
- To reset the Stopwatch, press and hold Down button

8.0 Golf mode

Navigating to golf mode

To move to golf mode from time mode, hold the OK button down. The main golf mode menu will then display. You can go back to the time mode at any time by pressing the OK button again.

Play golf

At the course, select Play Golf. The GPS will begin searching for satellites.



GENIUS W1

8.0 Golf mode

Automatic course recognition

The Sureshotgps™ Genius W1 Auto Course Recognition will highlight the closest five (5) courses to you. Use the Up/Down buttons and press the OK button to select the course you want to play.



Green view



GENIUS W1

8.0 Golf mode

Hazards mode

To view the hazards press the OK button when in Green View. Up to five (5) hazards are available and one hazard per screen will display. The 2 distances show the front and carry of the hazard. Use the up/down buttons to see more hazards.



Hazards button

Use this button to learn each hazard. The direction (left, right, centre) refer to the position on the fairway as you look towards the green.

L	Bunker Left	GMR	Grass Mound Right
BGR	Bridge Right	WC	Water Centre
BC	Bunker Centre	LUL	Lay-up Left
GML	Grass Mound Left	WR	Water Right
BR	Bunker Right	LUC	Lay-up Centre
GMC	Grass Mound Centre	DLL	Dog Leg Left
WL	Water Left	LUR	Lay-up Right
DLR	Dog Leg Right	TC	Tree Centre
RL	Rock Left	GBR	GBunker Right
OL	Other Left	TR	Tree Right
RC	Rock Centre	RO	Run Out
OC	Other Centre	BGL	Bridge Left
RR	Rock Right	LWL	LWater Left
OR	Other Right	BGC	Bridge Centre
GBL	GBunker Left	LWC	LWater Centre
TL	Tree Left	LWR	LWater Right
GBC	GBunker Centre		

8.0 Golf mode

Shot distance

Hold the OK button to go back to Green View and hold the Up button to switch to Shot Distance Page.

To mark your current position, lightly press Up button. After your shot, walk to your ball and press Up button again to record distance, which will display on the screen. Press Down button to reset.

Scorecard

To access Scorecard you must be in Green View. From there hold the Down button to switch to Scorecard Page.

Use Up/Down button to enter user score and press OK/Menu button to save score and exit.



GENIUS W1

9.0 Odometer menu

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.
Use Up/Down button to select “Odometer” and press OK/Menu button.

- Press Up button to start
- Press Up button again to pause
- Press Down button to reset
- To exit Odometer, press and hold OK/Menu button to return back to Golf Mode

10.0 Settings menu

Alarm

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select Settings and press OK/ Menu.

Use Up/Down button to select Alarm and press OK/ Menu.

Use Up/Down button to select Alarm 1/Alarm 2/ Alarm 3 and press OK/Menu button.

Use Up/Down button to set HH (00 ~ 23) and press OK/Menu

Use Up/Down button to set MM (00 ~ 59) and press OK/Menu button.

Use Up/Down button to set On/Off and press OK/ Menu button.

Press and hold OK/Menu button to return back to Golf Mode.

Press OK/Menu to stop alarm.

Time format

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select “Settings” and press OK/Menu button

Use Up/Down button to select “Time Format” and press OK/Menu button

Use Up/Down button to set 12H/24H and press OK/ Menu button

Press and hold OK/Menu button to return back to Golf Mode

10.0 Settings menu

Set time

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select “Settings” and press OK/Menu button

Use Up/Down button to select “Set time” and press OK/Menu button

Use Up/Down button to select Time 1/Time 2 and press OK/Menu button

Use Up/Down button to set Auto/Manual and press OK/Menu

If select Manual, use Up/Down button to set HH (00~ 23) and press OK/Menu

Daylight

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select “Settings” and press OK/Menu

Use Up/Down button to select “Daylight” and press OK/Menu button

Use Up/Down button to select On/Off and press OK/ Menu button (On = current time **minus** 1 hour)

Press and hold OK/Menu button to return back to Golf Mode

Date

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select “Settings” and press OK/Menu button

Use Up/Down button to select “Date” and press OK/Menu button

Use Up/Down button to select Year and press OK/ Menu button

Use Up/Down button to select Month and press OK/Menu button

Use Up/Down button to select Day and press OK/Menu button.

Unit

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select “Settings” and press OK/Menu button

Use Up/Down button to select “Unit” and press OK/ Menu button

Use Up/Down button to select Metric/Imperial and press OK/Menu button

Press and hold OK/Menu button to return back to Golf Mode

10.0 Settings menu

Backlight

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select “Settings” and press OK/Menu button

Use Up/Down button to select “Backlight” and press OK/Menu button

Use Up/Down button to select Off/5s/10s/30s and press OK/Menu button

Press and hold OK/Menu button to return back to Golf Mode

Sound

From Time Mode Page, press and hold OK/Menu button to access Golf Mode.

Use Up/Down button to select “Settings” and press OK/Menu button

Use Up/Down button to select “Sound” and press OK/ Menu button

Use Up/Down button to select On/Off and press OK/ Menu button

11.0 Sureanalysis software

Sureanalysis (Sureshotgps™ Genius W1 software) allows you to update the course library on your golf watch. Even though the watch comes with courses pre-loaded, we are continually updating our course library by adding new courses and updating our existing ones.

Sureanalysis allows you to keep your Sureshotgps™ Genius W1 up to date with the latest course data.

Please note: Before downloading the latest version of a course, you must first delete the old version from the Sureshotgps™ Genius W1.

System requirements

Compatible with Windows XP, Vista (32 & 64 bit), Windows 7 and Windows 8.

Sureshotgps™ Genius W1 is not compatible with Apple (Mac OS).

12.0 Frequently Asked Questions (FAQ)

Who can help me with technical questions & support?

Our friendly team is available on Live chat or email at support@sureshotgps.com. It is recommended you contact us first rather than returning to the place of purchase for the fastest response to your enquiry.

How do I download or update my courses?

SureAnalysis works only in conjunction with our website.

Go to www.sureshotgps.com and click on “My SureshotGPS”. From the menu, you can interact with your Sureshotgps™ Genius W1. To interact with your Sureshotgps™ Genius W1, it needs to be connected via the USB port.

Does my local club allow the use of measuring devices such as the Sureshotgps™ Genius W1?

The R&A Rule of Golf 2008-2011 states that measuring devices are permitted in the game of golf, providing a local rule has been passed by the Golf Club.

Sureshotgps™ encourages you to ask the club prior to use.

How do I reset my Sureshotgps™ Genius W1?

Press all 4 buttons on the unit at the same time and hold for 5 seconds. The unit will shut down and turn back on, this completes the reset.

13.0 Limited Warranty

Sureshotgps™ Pty Ltd (“Sureshotgps”) warrants the Sureshotgps™ Genius W1 device delivered in this package will be free from material defects for one (1) year following the date of purchase from Sureshotgps or its authorised reseller.

The accessories included in the package including USB cable, charging station, and battery are covered for material defects for one (1) year. For the purpose of this warranty, “material defect” means any defect in a Sureshotgps product that can be reproduced by Sureshotgps™ and is a substantial nonconformity from the published specifications for such product.

Sureshotgps™ shall not be responsible whatsoever resulting from any defect in or associated with its products which occur or are notified by the purchaser to Sureshotgps™ or its authorised repairer more than one year from said date of purchase. This Limited Warranty does not apply to normal wear and tear or if any component of the Sureshotgps™ hardware is opened or repaired by an unauthorised person and does not cover repair or replacement of any Sureshotgps™ hardware damaged by: MISUSE, MOISTURE OR LIQUIDS, EXPOSURE TO HEAT, ACCIDENT, ABUSE OR NEGLECT.

Dropping your Sureshotgps™ Genius W1 can permanently damage the receiver, which is not under Warranty.

This Limited Warranty does not cover physical damage to the surface of the Sureshotgps, including cracks or scratches on the screen.

Neither the manufacturer or distributor or reseller shall be responsible for data that may be damaged or lost at any time. As the Sureshotgps™ may gain information either through USB or wireless technology, we cannot guarantee the successful transmission of information.

This Limited Warranty does not extend to any defects which have been caused or contributed by neglect, misuse or accident, nor in respect of product which has been altered by other than authorised Sureshotgps personnel or its authorised repairers.

The determination as to whether the terms of this warranty are to apply to returned products is within the sole discretion of Sureshotgps™ or its authorised repairer. Provided any returned product is determined to be covered by this warranty, Sureshotgps™ or its authorised repairers shall at Sureshotgps™ sole discretion, repair or replace, free of charge, any products or parts thereof.

GENIUS W1

13.0 Limited Warranty

In no event whatsoever shall Sureshotgps™ be liable for any incidental, special or consequential loss or damage resulting from the purchase and/or use of its products howsoever caused and howsoever claimed. Any liability on Sureshotgps™ under this warranty in respect of any repair and /or replacement and/or any action involving any of its products shall be limited to and not exceed the purchase price of the product in question.

The terms of this warranty are subject to relevant provisions of any Federal, State or Municipal law. Any dispute or action in relation to this warranty or the construction of it shall be subject to and conducted in accordance with the laws of Victoria

Before returning any product, contact the Sureshotgps™ Customer Support Group and obtain an RA number. Visit the Sureshotgps™ website www.sureshotgps.com for support contact details. If the Customer Support Group verifies that the product is likely to be defective they will issue an RA number to place on the outer package in which the product will be shipped.

Sureshotgps™ cannot accept any product without an RA number on the package. Warranty returns must also be accompanied by a copy of the dated proof of purchase. Deliver the product along with the RA number to Sureshotgps™.

If you ship the product you must assume the risk of damage or loss in transit. You must use the original container (or the equivalent) and pay the shipping charge. Sureshotgps™ may replace or repair the product with either a new or reconditioned product and the returned product becomes Sureshotgps™ property.

Sureshotgps™ warrants the repaired or replaced product to be free from material defects for a period of the greater of (i) ninety (90) days from the return shipping date; or (ii) the period of time remaining on the original one (1) year warranty.

If there is any inconsistency between this Limited Warranty and any Warranty included in the packaging of the Sureshotgps, the provisions of this Limited Warranty shall apply.

14.0 Declaration of Conformity

We, Sureshotgps™ Pty. Ltd declare under our sole responsibility that the Sureshotgps™ conforms to all world standards of compliance.

Sureshotgps™ Pty. Ltd. operates a policy of continuous development. Sureshotgps™ Pty. Ltd. reserves the right to make changes and improvements to the Sureshotgps™ and any other of its products without prior notice.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchant- ability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Sureshotgps™ Pty. Ltd reserves the right to revise or withdraw it at anytime without prior notice.

15.0 Software licensing

This product contains embedded software. You have a non-exclusive, non-transferable right to use the soft- ware only as embedded in the hardware and may not copy, disassemble or attempt to reverse engineer the software or use it on any other hardware.

The software includes software supplied to Sureshotgps™ by third parties (“Suppliers”) which is provided without warranty by such Suppliers.

The software is owned by Sureshotgps™ or its Suppliers and is protected by copyright laws and laws protecting trade secrets, intellectual property and confidential information.