SUIEShot aser know the distance









Introduction

Congratulations!

Congratulations on your purchase of the sureshot Rangefinder, our laser rangefinder for golfers and golf professionals. This booklet will help you achieve optimum performance by explaining its adjustments and features as well as how to care for this precise laser range finding optical instrument. To ensure optimal performance and longevity, please read these instructions before using your sureshot Laser.




Contents

Display Indicators	4
Pinseeker Indicator	4
Introduction	4
Accuracy	4
Operating Instructions	4
Scanning Mode	4
Adjusting the Eyepiece	5
Cleaning	5
Specifications	5
Limited Warranty	6-7



Display Indicators

Your sureshotlaser display incorporates the following illuminated indicators:

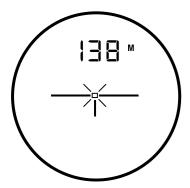

PinSeeker Indicator
Aiming Reticle
Active Laser
Distance Displayed in Yards/Meters
(To switch between Meters or Yard press and hold the Mode button)

Introduction

Your sureshot is an advanced premium laser rangefinder comprised of digital technology and allows range readings from 5 – 300m. The sureshotlaser technology with Pin Lock, allowing the golfer to easily and quickly "zero" in on the flag without acquiring background targets, and superb optical quality.

Accuracy

The ranging accuracy of the sureshotlaser is plus or minus one meter under most circumstances. Note: You will get both longer and shorter maximum distances depending on the reflective properties of the particular target and the environmental conditions at the time the distance of an object is being measured. The colour, surface finish, size and shape of the target all affect reflectivity and range. The brighter the colour, the longer the range. Red is highly reflective, for example, and allows longer ranges than the colour black, which is the least reflective colour. A shiny finish provides more range than a dull one. A small target is more difficult to range than a larger target. The less light (e.g. overcast skies) the farther the unit's maximum range will be. Conversely, very sunny days will decrease the unit's maximum range.

Operating Instructions

While looking through the Laser, depress the power button once to activate the display. Place the aiming square (located in the centre of the field of view) upon a target at least 5m away, depress the power button and the range reading will be displayed near the top of the in-view display.

Scanning Mode

Place the aiming square (located in the centre of the field of view) upon a target at least 5m away, depress and hold the power button and the range reading will be displayed near the top of the in-view display.

Adjusting the Eyepiece

The sureshotlaser is equipped with an adjustable eyepiece that allows you to focus the display relative to the image. Simply rotate the eyepiece until the display is in focus.



Cleaning

Gently blow away any dust or debris on the lenses (or use a soft lens brush). To remove dirt or fingerprints, clean with a soft cotton cloth, rubbing in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and eventually cause permanent damage. For a more thorough cleaning, photographic lens tissue and photographic-type lens cleaning fluid or isopropyl alcohol may be used. Always apply the fluid to the cleaning cloth – never directly on the lens.

Specifications

-	
SPECIFICATIONS	PINLOC1500
Measure Range	5 – 300m
Objective Lens	24mm
Magnification	6 X
Field of View	7°
Exit Pupil Diameter	3.8mm
Diopter Adjust Range	± 4
Working Temperature	-20 – 50°C
Accuracy	±1M(Y)±0.2%
Battery Type	CR2-3V
Low Battery Indicator	\
Flag-lock	Yes
Weight	185g
Dimensions	104mm × 72mm × 41mm

Water Resistant 🗸





Limited Warranty

Limited Warranty Limited Warranty sureshotgps™ Pty Ltd ("SS") warrants the product delivered in this package will be free from material defects for one (1) year following the date of purchase from SS or its authorised reseller. For the purpose of this warranty, "material defect" means any defect in a SS product that can be reproduced by SS and is a substantial nonconformity from the published specifications for such product. SS shall not be responsible for any loss or damage whatsoever resulting from any defect in or associated with its products which occur or are notified by the purchaser to SS or its authorised repairer more than one year from said date of purchase. This Limited Warranty does not apply to normal wear and tear or if any component of the sureshotlaser hardware is opened or repaired by an unauthorised person or company, and does not cover repair or replacement of any sureshotlaser hardware damaged by: MISUSE, MOISTURE OR LIQUIDS, EXPOSURE TO HEAT, ACCIDENT, ABUSE OR NEGLECT. Dropping your sureshotlaser can permanently damage the laser, optical lenses and LCD, which is not covered under the terms of the Limited Warranty. This Limited Warranty does not cover physical damage to the surface of the SS, including cracks or scratches on the LCD screen and Lenses. This Limited Warranty does not extend to any defects which have been caused or contributed by neglect, misuse or accident, nor in respect of product which has been altered by other than authorised SS personnel or its authorised repairers. The determination as to whether the terms of this warranty are to apply to returned products is within the sole discretion of SS or its authorised repairer. Provided any returned product is determined to be covered by this warranty, SS or its authorised repairers shall at SS's sole discretion, repair or replace, free of charge, any products or parts thereof. In no event whatsoever shall SS be liable for any incidental, special or consequential loss or damage resulting from the purchase and/or use of its products howsoever caused and howsoever claimed.

Any liability on SS under this warranty in respect of any repair and /or replacement and/or any action involving any of its products shall be limited to and not exceed the purchase price of the product in question. The terms of this warranty are subject to relevant provisions of any Federal, State or Municipal law. Any dispute or action in relation to this warranty or the construction of it shall be subject to and conducted in accordance with the laws of Victoria, Australia.

Limited Warranty

Before returning any product, contact the SS Customer Support Group and obtain an RA number. Visit the sureshotaps™ web site www.sureshotaps.com for support contact details. If the Customer Support Group verifies that the product is likely to be defective they will issue an RA number to place on the outer package in which the product will be shipped. SS cannot accept any product without an RA number on the package. Warranty returns must also be accompanied by a copy of the dated proof of purchase. Deliver the product along with the RA number to SS. If you ship the product you must assume the risk of damage or loss in transit. You must use the original container (or the equivalent) and pay the shipping charge. SS may replace or repair the product with either a new or reconditioned product and the returned product becomes SS's property. SS warrants the repaired or replaced product to be free from material defects for a period of the greater of (i) ninety (90) days from the return shipping date; or (ii) the period of time remaining on the original one (1) year warranty. If there is any inconsistency between this Limited Warranty and any Warranty included in the packaging of the sureshotlaser, the provisions of this Limited Warranty shall apply.



POWERED BY * MGI

sureshotgps Pty Ltd

11 Maurice Court Nunawading Victoria Australia 3131 1300 644 523 or +61 3 9873 4433 Sureshotgps is a division of MGI. Made in China.