

 **sureshotgps**
know the distance



INSTRUCTION MANUAL

watch+

sureshotgps.com

GETTING STARTED

The user manual explains everything you need to know about the new Sureshotgps Watch+. If you want a quick read or just after the essentials, we suggest that you read the Quick Start guide.

Important: Before using the Watch+ it is recommended that you register. Software or course updates will only be possible if you register.

REGISTERING

To register your new Watch+ you will first need to download and install Sureanalysis (Supported on Windows Vista and above)

1. Download Sureanalysis for your Watch+ from www.sureshotgps.com > My Sureshotgps
2. Attach the charging clip provided and connect the other end of the USB lead to your computer

Follow the instructions that Sureanalysis gives you to link your watch with the software.

ABOUT YOUR WATCH+

The Sureshotgps Watch+ comes pre-loaded with 36,000 world maps and can be used straight out of the box.



CHARGING

It is important that you that you charge your watch fully before a round of Golf. Use the charging clip supplied to charge your Watch+.

Tip: Your watch is fully charged when the battery animation displays 100%.

When the battery is fully charged, the watch can be used for one round of Golf (5 hours).

SETTING THE TIME

From the clock screen, unlock the watch and press the menu button > scroll to Setting > System > Time.

In this screen you can set the time manually or by GPS (recommended). To set the time using GPS the watch must be in an outdoor area.

HOW TO UNLOCK

Hold down the SELECT/ENTER button for 2 plus seconds.

PLAYING A ROUND OF GOLF

Important Note: You must be at your golf course for the Watch+ to display your course and other courses to display.

From the clock screen unlock the watch, press Menu button and select Play Golf. Your watch will search for a GPS signal and pick up the 5 closest courses to your GPS location, scroll up or down and press the Select/ Enter button to select a course. The Watch+ is also designed to record your fitness stats during the round.

GREEN VIEW

In this mode the watch will display in real time the distance from you to the Front, Centre & Back of the Green. This screen will display the Hole number, time and Par, to change to a different hole, unlock the device and press the UP button.



To navigate to the hazard or fitness screens, simply unlock the device and press the Enter/ Select button till you reach the preferred screen.

The watch will always default to the first hole. For shotgun starts you will need to unlock the watch and manually scroll to the preferred hole. To navigate to the hazard or fitness screens, simply unlock the device and press the Enter/ Select button till you reach the preferred screen.

UNDERSTANDING HAZARDS

To access hazard view, unlock the watch and press the Select/ Enter button



BUNKER



DOGLEG
(LEFT)



DOGLEG
(RIGHT)



TREE



WATER

The watch will display up to 5 key hazards per hole and show distance to the front and carry. You can exit hazard view by unlocking and scrolling through using the Select/ Enter button.

When you choose scoring ON:

In scoring mode the watch is designed to automatically bring up the scorecard when the digital display reads less than 15 meters to the centre of the green. To enter your score, unlock the screen and use the UP and Down buttons to choose your score.

For the Auto Hole function to work successfully, the unit needs to be within 15 metres of the centre of the green you are currently playing and then you need to move out 19m for it to advance.

Tip: The Watch+ is designed to save up to 5 scorecards. To access your scorecard history, go the Scorecard option in the menu. Each scorecard record also contains your fitness information.

Important: GPS accuracy is affected by a number of factors, including satellite positions, noise in the radio signal, atmospheric conditions, and natural barriers to the signal. Noise can create an error between 10 to 15 meters and results from static or interference from something near the receiver or something on the same frequency.

The most accurate determination of position occurs when the satellite and the receiver have a clear view of each other and no other objects interfere.

sureshotgps.com

SPORTS MODE

Your Watch+ has a built-in heart rate sensor to help you train more efficiently or track your fitness in during a round of Golf. For the device to track your activity your personal stats need to be setup on the device, you do this by unlocking the device, go to the Menu > Settings > Personal.

The device will accurately measure your activity only if you enter the following personal stats,

- Gender
- Age
- Height
- Weight

How the sensor works

Your heartbeat is measured by using light to measure changes in your blood flow. This is done on the top of your wrist by shining light through the skin onto the capillaries just below the skin and detecting the changing light reflections.

To get the best performance from the heart rate sensor make sure your watch is worn as follows:

- Done up tightly, but not so tight that it is uncomfortable.
- Placed above the wrist bone.

Activities in Sports mode

In Sports mode the Watch+ is designed to be used for Walking or Running. To start the activity unlock the screen, go to the Menu and choose your activity.

Important: After your workout the Watch+ will not save your activity, this feature is only available in Golf mode.

Tip: Scroll down to view additional fitness stats.



Calorie estimation

Calories are estimated based on your gender, your weight and the intensity and duration of the exercise.

This is not a medical device; it is intended to be a tool to provide you with information to encourage an active and healthy lifestyle. The data and information provided by this device are intended to be a close estimation of your activity, but may not be completely accurate.

CLEANING YOUR WATCH+

It is recommended that you clean your watch once a week if you use it frequently.

- Wipe with a damp cloth as needed
- Do not expose to strong chemicals such as gasoline, cleaning solvents, acetone, alcohol, or insect repellents. Chemicals can damage the seal, case, and finish
- Clean the heart rate sensor area and do not scratch the heart rate sensor

ABOUT SETTING

All the settings for your Watch+ can be found in the setting menu. To access Setting, unlock the watch and scroll to settings.

- Display Type – Two display options available
- Alarm – Set the alarm on or off
- Unit – Change between Metres or Yards
- Personal – Enter your personal stats Gender, Age, Height & Weight

SYSTEM

- Time – Set **Time Zone** then select **Set By GPS** to pick-up the correct date.
- Backlight – Set backlight duration, up to 60 seconds
- Buzzer – To change between vibration, beep or both (Vibration will reduce battery life)
- Language – Switch between 8 different languages (Golf course names will always remain in English)
- Default – Restore factory setting

WATER RESISTANT

- Water resistant up to 30m means you are ready for all kinds of weather.

BATTERY

- Golf mode: up to 6.5 hours
- Time mode: up to 40 days
- Sports mode: up to 6.5 hours

System Requirements

- Windows Vista and above. Not supported on Mac OS

LIMITED WARRANTY

Sureshotgps™ Pty Ltd (“SS”) warrants that product delivered in this package will be free from material defects for one (1) year following the date of purchase from SS or its authorised reseller. For the purpose of this warranty, “material defect” means any defect in a SS product that can be reproduced by SS and is a substantial nonconformity from the published specifications for such product. SS shall not be responsible for any loss or damage whatsoever resulting from any defect in or associated with its products which occur or are notified by the purchaser to SS or its authorised repairer more than one year from said date of purchase.

This Limited Warranty does not apply to normal wear and tear or if any component of the Sureshotgps hardware is opened or repaired by an unauthorised person or company, and does cover repair or replacement of any Sureshotgps hardware damaged by: MISUSE, MOISTURE OR LIQUIDS, EXPOSURE TO HEAT, ACCIDENT, ABUSE OR NEGLECT. Dropping your Sureshotgps can permanently damage the GPS antenna and receiver, which is not covered under the terms of the Limited Warranty.

This Limited Warranty does not cover physical damage to the surface of the Sureshotgps, including cracks or scratches on the LCD screen. Neither the manufacturer or distributor or reseller shall be responsible for data that may be damaged or lost at any time. As the SS may gain information either through USB or wireless technology, we cannot guarantee the successful transmission of information.

This Limited Warranty does not extend to any defects which have been caused or contributed by neglect, misuse or accident, nor in respect of product which has been altered by other than authorised SS personnel or its authorised repairers. The determination as to whether the terms of this warranty are to apply to returned products is within the sole discretion of SS or its authorised repairer. Provided any returned product is determined to be covered by this warranty, SS or its authorised repairers shall at SS's sole discretion, repair or replace, free of charge, any products or parts thereof. In no event whatsoever shall SS be liable for any incidental, special or consequential loss or damage resulting from the purchase and/or use of its products howsoever caused and howsoever claimed. Any liability on SS under this warranty in respect of any repair and /or replacement and/or any action involving any of its products shall be limited to and not exceed the purchase price of the product in question. The terms of this warranty are subject to relevant provisions of any Federal, State or Municipal law. Any dispute or action in relation to this warranty or the construction of it shall be subject to and conducted in accordance with the laws of Victoria, Australia. Before returning any product, contact the SS Customer Support Group and obtain an RA number. Visit the Sureshotgps™ web site www.sureshotgps.com for support contact details. If the Customer Support Group verifies that the product is likely to be defective they will issue an RA number to place on the outer package in which the product will be shipped. SS cannot accept any product without an RA number on the package. Warranty returns must also be accompanied by a copy of the dated proof of purchase. Deliver the product along with the RA number to SS. If you ship the product you must assume the risk of damage or loss in transit.

You must use the original container (or the equivalent) and pay the shipping charge. SS may replace or repair the product with either a new or reconditioned product and the returned product becomes SS's property. SS warrants the repaired or replaced product to be free from material defects for a period of the greater of (i) ninety (90) days from the return shipping date; or (ii) the period of time remaining on the original one (1) year warranty. If there is any inconsistency between this Limited Warranty and any Warranty included in the packaging of the Sureshotgps, the provisions of this Limited Warranty shall apply.

Declaration of Conformity

We, Sureshotgps™ Pty. Ltd declare under our sole responsibility that the Sureshotgps™ conforms to all world standards of compliance. Sureshotgps™ Pty. Ltd. operates a policy of continuous development. Sureshotgps™ Pty. Ltd. reserves the right to make changes and improvements to the Sureshotgps™ and any other of its products without prior notice. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Sureshotgps™ Pty. Ltd reserves the right to revise or withdraw it at any time without prior notice.

Software Licensing

This product contains embedded software. You have a non-exclusive, non-transferable right to use the software only as embedded in the hardware and may not copy, disassemble or attempt to reverse engineer the software or use it on any other hardware. The software includes software supplied to SS by third parties ("Suppliers") which is provided without warranty by such Suppliers. The software is owned by SS or its Suppliers and is protected by copyright laws and laws protecting trade secrets, intellectual property and confidential information.

sureshotgps.com