



www.sureshotgps.com

 
User Manual LAUNCH MONITOR



► Registration for Warranty

Please register your Sureshotgps Launch Monitor to record the warranty period. Visit www.sureshotgps.com and click on the Register button on the home page.

► Positioning

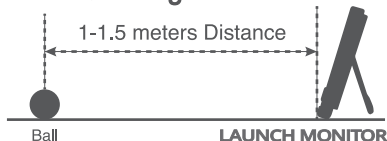

Positioning Launch Monitor
1-1.5 metres (40-60 inches)
directly behind the ball

Range: 30-300 metres/yards

► Basic Usage

Unit Selection: Press and hold the – button on the Launch Monitor
YARD ↔ METRE MPH ↔ KM/H

Mode Selection: Press the M (MODE) button on the Launch Monitor
or on the remote control. PRACTICE → RANDOM → TARGET

Club Selection: Press the C (CLUB/STATS) button on the
Launch Monitor or select your desired club on the remote control.
W1 → W3 → W4 → W5 → W6 → W7 → U3 → U4 → U5 → U6 →
U7 → I4 → I5 → I6 → I7 → I8 → I9 → PW → AW → SW

► Package Contents

Launch Monitor / Pouch / Remote Control / 4x AAA Batteries / User Manual

sureshotgps™ LAUNCH MONITOR

► Warranty

For any help or queries, please contact Sureshotgps DIRECT.
Do not go back to your retailer. Our friendly team is available on LIVE CHAT & email to answer questions, or you are welcome to visit our FAQ area on the website. To contact the support team visit www.sureshotgps.com.
Sureshotgps warrants the Launch Monitor against defects in materials and workmanship for a period of one year from date of purchase. If defects exist, Sureshotgps will 1) repair at no charge 2) Exchange the product with a new product or equivalent unit if unavailable. This warranty does not apply:
1) to damage caused by accident, misuse, abuse or misapplication
2) damaged caused by someone not authorised by Sureshotgps. For more information on Sureshotgps warranty please visit www.sureshotgps.com.

► Notes

- ① Launch Monitor measures carry distance and does not account for run.
- ② The range of the remote control may be reduced in direct sunlight.
- ③ Data for practice swings are not stored or displayed.
- ④ Data for aberrant shots are not stored or displayed.
- ⑤ Data for shots that fly to the far left or right may not be accurate.

► Specifications

Battery Type	3V AAA Battery (4x)
Battery Life	up to 20 hours
Dimensions	150.5 x 77.0 x 25.5 mm (5.92 x 30.03 x 1.00 in)
Weight	206 g (including battery)
Operating Temperature	0 - 50°C (32 - 122°F)

 
► Mailing Address

Sureshotgps Pty Ltd
11 Maurice Crt, Nunawading VIC 3131
Email: support@sureshotgps.com
Web: www.sureshotgps.com



► Practice Mode


- Displays immediate feedback on the preceding shot.

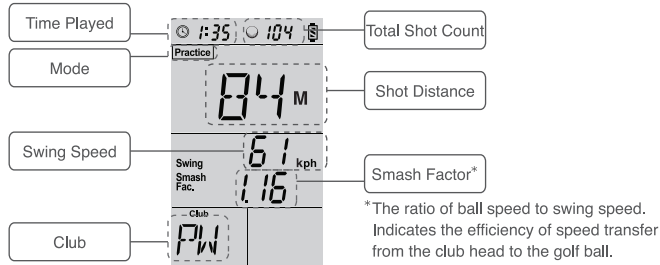

- Ball Speed / Smash Factor Selection: Press and hold the + button or press the BALL/SMASH button on the remote control.

► Target Mode

 - Before the shot: Displays your target distance.
- After the shot: Displays your shot (carry) distance.

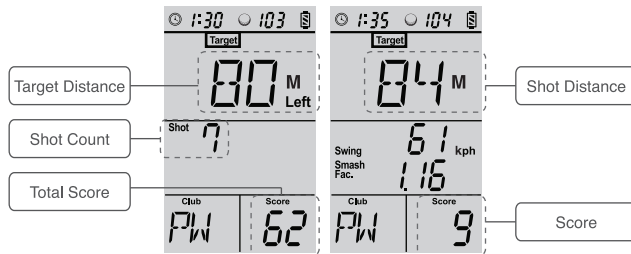


- Use the + and – buttons to set your target distance. (range: 40-200 metres/yards) (increment: 5 metres/yards)
- In Target Mode, Launch Monitor scores each shot for accuracy.
 - *The pre-shot display shows your total score for the round. (perfect score: 100)
 - *The post-shot display shows your score for the preceding shot. (perfect score: 10)
 - *Tip: A bonus point (+1) will be awarded for matching the exact target distance!
 - *One round in Target Mode is 10 shots.

► Random Mode

- Before the shot: Displays a randomly generated target distance. (range: 40-100 metres/yards)
- After the shot: Displays your shot (carry) distance.
- Use the + or – button to generate a new target distance.
- In Random Mode, Launch Monitor scores each shot for accuracy.
 - *The pre-shot display shows your total score for the round. (perfect score: 100)
 - *The post-shot display shows your score for the preceding shot. (perfect score: 10)
 - *Tip: A bonus point (+1) will be awarded for matching the exact target distance!
 - *One round in Random Mode is 10 shots.
- Display: See Target Mode

► Stats

 - Displays your average stats for each club. (shot distance, swing speed, ball speed, smash factor)
- Press and hold the C (CLUB/STATS) button or press the STATS button on the remote control to enter Stats Mode.
- Use the + or – button to switch between average stats for the last 100 shots (ALL) and average stats for the day (DAY).
- Press and hold the + button or press the BALL/SMASH button on the remote control to switch between ball speed and smash factor.
- Press and hold the C (CLUB/STATS) button to reset stats.

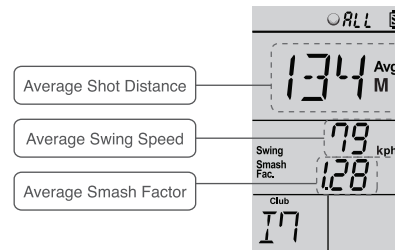

► Sleep Mode

- Saves energy and prolongs battery life during breaks.
- Displays time played. The clock continues to run in Sleep Mode.
- Press the SLEEP MODE button on the remote control.